





- Examine the scope of delivery to make sure all pieces are included and are not damaged.
- There are different pole components in each carrying case depending on the Bowflag® size.

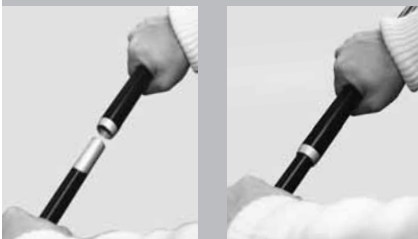

- Lay pole components out on the floor in a row, starting with the largest.
- Put together pole components.



- Mount the flag to pole by inserting the tip of the pole into the sleeve and working the flag down the pole.
- Note: Be certain the tip of the pole is fully inserted into the strengthened end of the sleeve. Do not overbend the pole!

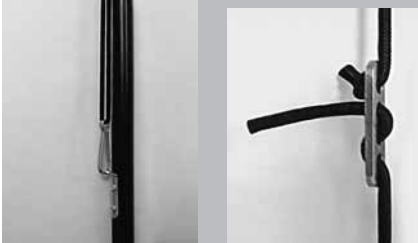

- Loosen one end of the elastic cord from the tensioner, pull it through the flag grommet, and put it back into the tensioner.
- Slowly and evenly pull the flag taut. Adjust and fix the elastic cord with the tensioner.
- Complement the Bowflag® with one of the supplied bases.



- Do not hammer on the top of the swivel! This will damage the bearing. Instead, hammer on the top of the spike that goes into the ground. Always use gloves and safety glasses and exercise caution when using tools. If this is not done correctly, failure of ground spike will result and all warranties will be void.



Washing, drying, ironing

Our flags are made from branded polyester and can be washed in all household washing machines at 140°F (60°C) with the addition of washing detergent.

Before washing it is advisable to remove all items that could cause damage. After washing, the flag should be rinsed thoroughly. For drying, the washed sails are best hung wet or hoisted on the pole. The ironing and steaming of the flag for outdoor use is not necessary. Products for indoor use can be ironed or steamed. Do not dry clean your Bowflag®.

- Entnehmen Sie alle Einzelteile aus der Verpackung und prüfen Sie die Vollständigkeit. Die Anzahl der Stangensegmente variiert mit den Bowflag®-Größen.

- Legen Sie die Stangensegmente hintereinander geordnet auf den Boden, beginnend mit dem größten Stangendurchmesser.
- Stecken Sie die Stangensegmente zusammen.

- Zur Befestigung der Bowflag®-Bespannung an der Stange schieben Sie den Hohlraum einfach von der Stangenspitze beginnend auf die Stange auf.
- Hinweis: Bitte achten Sie darauf, dass die Stangenspitze komplett in das verstärkte Ende des Hohlraums eingeführt wird. Die Stange darf nicht überspannt werden!

- Lösen Sie ein Ende des Spanngummis aus dem Justierplättchen und führen Sie den Spanngummi durch die Öse vom Bowflag®
- Verbinden Sie den Spanngummi anschließend wieder mit dem Justierplättchen
- Spannen Sie das Bowflag® langsam und gleichmäßig. Fixieren Sie den Spanngummi mit dem Justierplättchen.

- Komplettieren Sie das Bowflag® mit einer der gelieferten Bodenhalterungen.
- Bei Verwendung des Erdspießes bitte beachten: Schlagen Sie bei der Montage niemals auf den Rotator sondern ausschließlich auf den Spieß. Reklamationen, die auf unsachgemäßen Gebrauch zurückzuführen sind, können nicht anerkannt werden.

Pflege- und Reinigungshinweise

Bowflag®-Bespannungen aus Markenpolyester können in jeder Haushaltswaschmaschine unter Verwendung eines Markenwaschmittels bei 60°C gewaschen werden. Vor dem Waschen empfiehlt es sich, alle harten Teile, die Beschädigungen des Flaggenmaterials verursachen können, zu entfernen. Zum Trocknen werden die Bowflag®-Bespannungen tropfnass aufgehängt oder an der Stange befestigt. Für den Einsatz im Innenbereich kann das Produkt gebügelt werden. Von einer chemischen Reinigung sollte grundsätzlich abgesehen werden, da sonst keine Garantie für die Farbestabilität gegeben werden kann.